

3. The following Baghdad FIR entry/exit point is not currently in effect:

COUNTRY	FIX	LAT / LONG
Syria (exit)	ELEXI	344130N 0410900E

- 4.4 All flight plans are required to include the FIR entry/exit report point as part of the flight planned route in the route section of item 15 of the flight plan.

- 4.5 All overflights through Baghdad FIR shall flight plan as follows:

4.5.1 Northbound:

TASMI UL602 ALPET UM860 NINVA, or
MODIK G202 RAPLU R652 MUTAG DCT TOTAM UM860 NINVA, or
PASIP L200GIBUX R652 MUTAG DCT TOTAM UM860 NINVA, or
MURIB B411 LOVEK DCT SEPTU UM860 NINVA

4.5.2 Southbound:

RATVO UM688 SIDAD
MODIK G202 PUSTO M203 ILMAP UP975 SIDAD, or
PASIP L200 SILBO M203 ILMAP UP975 SIDAD, or
RATVO UM688 VAXEN Z431 LOVEK B411 MURIB, or
RAGET Z431 LOVEK B411 MURIB

4.5.3 Eastbound:

MODIK G202 PUSTO M203 LOVEK B411 PAXAT, or
PASIP L200 SILBO M203 LOVEK B411 PAXAT

4.5.3 Westbound:

RAGET G202 MODIK, or
RAGET G202 RAPLU R652 GIBUX L200 PASIP, or
TASMI UL602 DELMI G202 MODIK, or
TASMI UL602 DELMI G202 RAPLU R652 GIBUX L200 PASIP

- 4.6 All international traffic operating at Iraq International Airports should flight plan as follows:

4.6.1 Al Najaf Al-Ashraf International Airport (ORNI)

Arrivals: North: RATVO UM688 VAXEN Z431 LOVEK DCT ALI
South: TASMI UL602 ALPET DCT ALI
West: MODIK G202 PUSTO M203 LOVEK DCT ALI, or
PASIP L200 SILBO M203 LOVEK DCT ALI
Southwest: MURIB B411 RALTI DCT ALI
East: RAGET Z431 LOVEK DCT ALI

Departures: North: ALI DCT LOVEK DCT SEPTU UM860 NINVA
South: ALI DCT SETSA M203 ILMAP UP975 SIDAD
West: ALI DCT LOVEK UL602 DELMI G202 MODIK, or
ALI DCT LOVEK UL602 DELMI G202 RAPLU R652 GIBUX
L200 PASIP
Southwest: ALI DCT RALTI B411 MURIB
East: ALI DCT LOVEK B411 PAXAT

4.6.2 Baghdad International Airport (ORBI)

Arrivals: North: RATVO UM688 VAXEN DCT BGD
South: TASMI UL602 LOVEK DCT BGD
West: MODIK G202 DELMI DCT BGD, or
PASIP L200 SILBO DCT BGD
Southwest: MURIB B411 LOVEK DCT BGD
East: RAGET G202 ITOVA DCT BGD

Departures: North: BGD DCT NAMDI UM860 NINVA
South: BGD DCT NOLDO UP975 SIDAD
West: BGD DCT SILBO L200 PASIP, or
BGD DCT DELMI G202 MODIK
Southwest: BGD DCT LOVEK B411 MURIB
East: BGD DCT NOLDO B411 PAXAT

4.6.3 Basra International Airport (ORMM)

Arrivals: North: RATVO UM688 PEBAD DCT BSR
South: TASMI G795 BSR
West: MODIK G202 PUSTO M203 ILMAP UP975 PEBAD DCT BSR, or
PASIP L200 SILBO M203 ILMAP UP975 PEBAD DCT BSR, or
MURIB B411 LOVEK M203 ILMAP UP975 PEBAD DCT BSR
East: RAGET VAXEN UM688 PEBAD DCT BSR

Departures: North: BSR DCT ALPET UM860 NINVA
South: BSR DCT SIDAD
West: BSR DCT ALPET UL602 DELMI G202 MODIK, or
BSR DCT ALPET UL602 DELMI G202 RAPLU R652 GIBUX L200
PASIP, or
BSR DCT ALPET UL602 LOVEK B411MURIB
East: BSR DCT ALPET UM860 RESAK DCT PAXAT

4.6.4 Erbil International Airport (ORER)

Arrivals: North: RATVO UM688 OTIDO DCT RER
South: TASMI UL602 ALPET UM860 TOTAM DCT RER
West: MODIK G202 RAPLU R652 MUTAG DCT TOTAM DCT RER,
or
PASIP L200 GIBUX R652 MUTAG DCT TOTAM DCT RER
Southwest: MURIB B411 LOVEK DCT SEPTU UM860 TOTAM DCT RER
East: BOXIX DCT SUL DCT RER

Departures: North: RER DCT DARIX UM860 NINVA
South: RER DCT DERNU UM688 SIDAD
West: RER DCT DERNU DCT MUTAG R652 RAPLU G202 MODIK,
or
RER DCT DERNU DCT MUTAG R652 GIBUX L200 PASIP,
or
RER DCT DERNU UM688 VAXEN Z431 LOVEK B411
MURIB
East: RER DCT DERNU DCT BOXIX

4.6.5 Sulaimaniyah International Airport (ORSU)

Arrivals: North: RATVO UM688 OTIDO DCT SUL
South: TASMI UL602 ALPET UM860 TOTAM DCT SUL
West: MODIK G202 RAPLU R652 MUTAG DCT TOTAM DCT SUL,
or
PASIP L200 GIBUX R652 MUTAG DCT TOTAM DCT SUL
Southwest: MURIB B411 LOVEK DCT SEPTU UM860 TOTAM DCT SUL
East: BOXIX M434 DAVAS DCT SUL

Departures: North: SUL DCT DARIX UM860 NINVA
South: SUL DCT SOBIL UM688 SIDAD
West: SUL DCT DAVAS R652 RAPLU G202 MODIK, or
SUL DCT DAVAS R652 GIBUX L200 PASIP, or
SUL DCT SOBIL UM688 VAXEN Z431 LOVEK B411 MURIB
East: SUL DCT DAVAS M434 BOXIX